

CHANGING TONERS



PRINT WIZARD

Important Notice: Changing Toners

Changing Toners and how to handle them safely.

All toners cartridges and image drums can be damaged when not handled correctly. Cartridges are also sensitive to UV light and vibration.

Handled correctly they will last as long as there is toner left inside them.

When toner cartridges are removed from the machine they must be placed back in their original packaging.

Their original packing is UV proof and stops the image drum surface from becoming damaged and unusable.

We support you!

We are just at the end of the telephone. For any questions or problems, do not hesitate to contact us and we will help you with finding a solution.



01623 863343

info@yesltd.co.uk

Removing the Toner Cartridge

When removing the cartridges have the packaging handy

Open the front section of the machine and using the blue handle pull the access tray outwards:



The illustration below shows the HP M252DW. Your machine layout maybe different, please refer to the printers manual for Cartridge replacement instructions.

Lift the Toner cartridge out using the handle and place on its protective orange tray and inside the UV protection bag and place back in its box for storage:

